




IP400 Xylophone



IP402 Tongue Drums



IP41 Glockenspiel

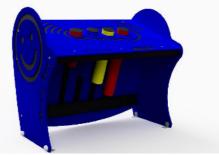


IP403 Bongos

Product Name	Music Box
Product Code	IP400 Series
Document Release Date	02/09/2021
Document Rev	1



EXPLODED ASSEMBLY VIEW

Music Box pre-assembled ready for installation.

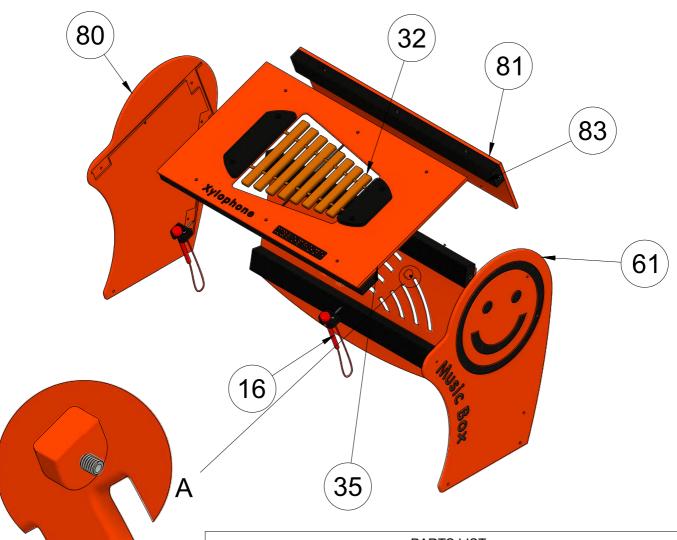

Under Table Tab Fixing

PARTS LIST			
ITEM NO	CODE	DESCRIPTION	QTY
16		Music Sticks 2	
32	FPL7958-A	Virtuoso Flat Chimes - Low - Front 1 Pannel	
35	FPL0525-A	Music Box - Support Bar - 1200 x 100 x 1 50mm	
61	FPL0522-D	Music Box - RH Panel	1
80	FPL0521-D	Music Box - LH Panel	1
81	FPL0523-A	Music Box - Rear Top Pannel	1
83	FPL0524-C	Top Pannel	1

Installation Sheet for IP400 - Series: Music Box

INSTALLATION OVERVIEW

IN GROUND SUPORT



Two people are requitred for this installation.

Day One - 4 Hour

Assemble all four ground anchors on the music box by using the bolts and fixing provided. Ensure all fixings are tight and secure.



Excavate two troughs 250mm x 713mm x 200mm. More information on page 6.




Place a slab or similar hard standing base into the bottom of the excavated hole. This can be crushed stone or gravel. Ensure this is level.



Place the Musix Box onto the hard standing base. Ensure the item is level and make adjustments if nessesary.



with cement whilst checking the Music Box level is maintained. Cement Volume is 0.026m3.

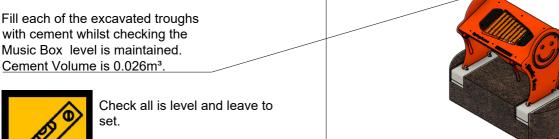



Check that all bolts and fixings are secure ready for use.



Installation Sheet for IP400 - Series: Music Box

INSTALLATION OVERVIEW

SURFACE MOUNT

Two people are required fot the installation.

Day One - 2 Hours

Assemble all four surface mount on the music box by using the bolts and fixing provided. Ensure all fixings are tight and secure.

Excavate two troughs 250mm x 713mm x 200mm. More information on page 7.

Fill each of the excavated troughs with cement whilst checking the cement is level is maintained.

Cement Volume is 0.035m3.

Leave Cement to Set.

Day Two - 1 Hour

When cement is set place the music box and the surface mount on top of the cement and bolt on securly. See page 4



Check that the Music Bow is level and secure.










SURFACE MOUNT

Surface Fixing (Anchor Bolt Not Supplied)

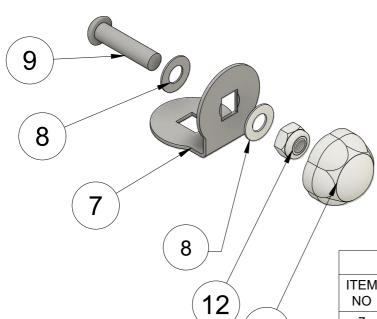


10



PARTS LIST			
ITEM NO	CODE	DESCRIPTION	QTY
7	FME0023-A	90 Degree Bracket	4
8	FSU0031-A	M10 Washer - SS	8
9	FSUOO3-A	M10 x 40mm Button Head Bolt - SS	4
10	FSUO100-A	M10 Two Piece Security Cap - Flower 9	4
12	FSU0009-A	M10 Nylock Nut - ZP	8

IN GROUND ANCHOR

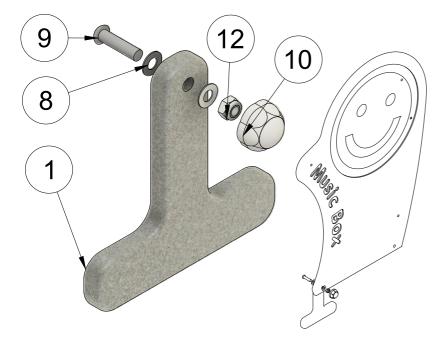

PARTS LIST			
ITEM NO	CODE	DESCRIPTION	QTY
1	FPL0683 - A	T Foundation Anchor	4




IN GROUND ANCHOR DETAILS




CHECK LEVEL

Use a spirit level: Placing a level base into the ground allows the ground anchor to be placed safely and it will allow the full product to be level.




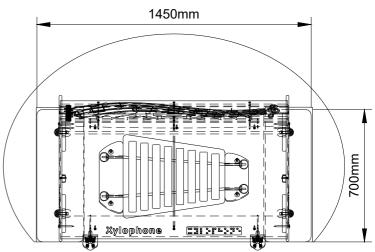


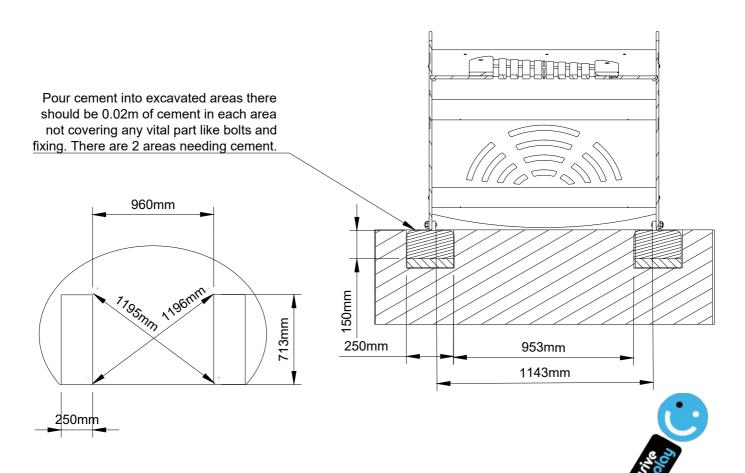

SURFACE MOUNT ANCHOR DETAILS




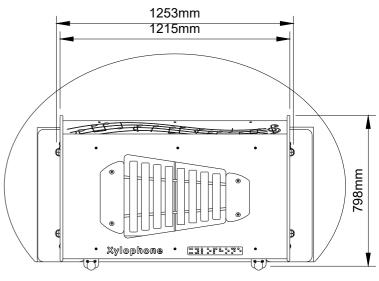

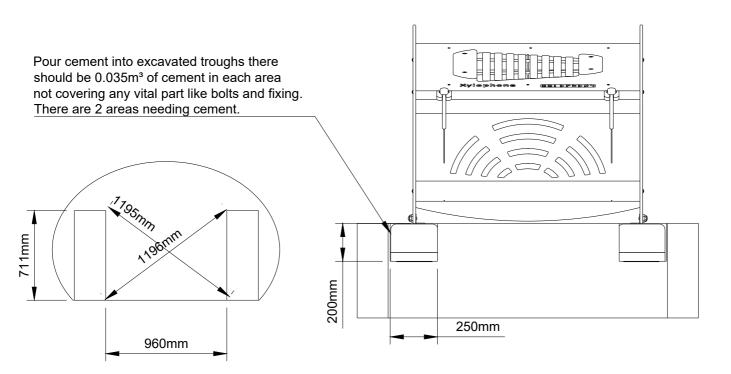





IN GROUND FOUNDATION DETAILS

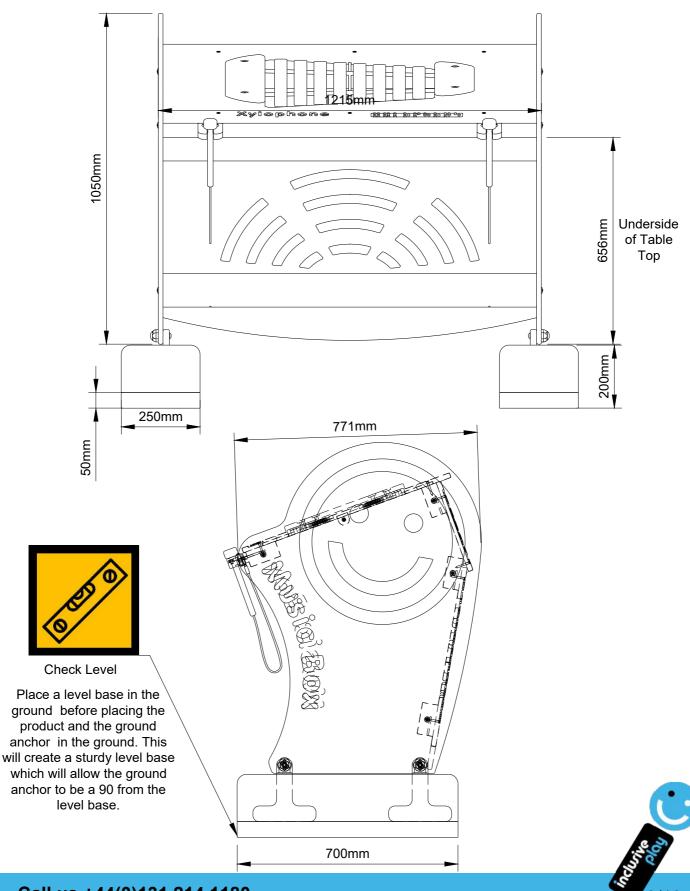


SURFACE MOUNT FOUNDATION DETAILS

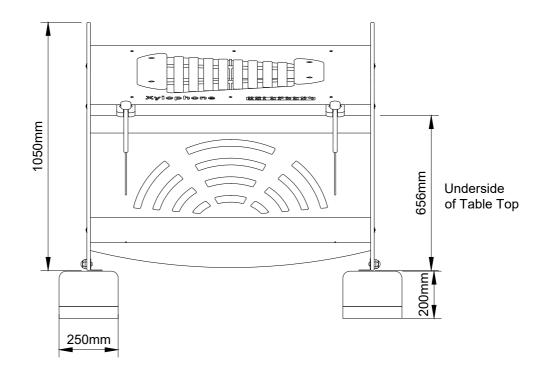

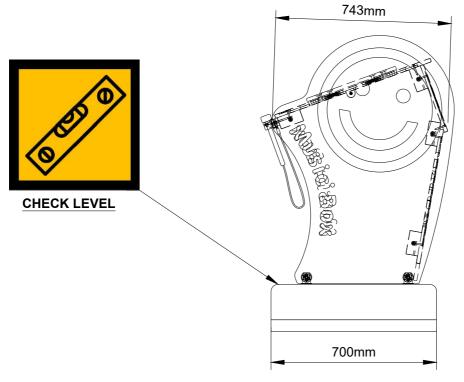



SAFTY SURFACING DETAIL

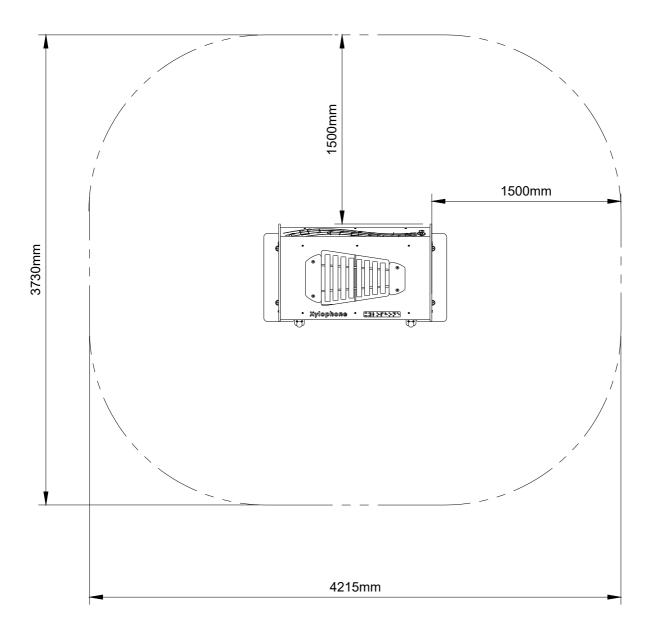

Grassmat Qty (mat - 1.5m²)	1 mat
Loosefill (m³)	N/A
Falling Space	N/A
Age Range	3 Years +
Notes	We recommend a minimum 1.5m usage area around the Music Box

