

 

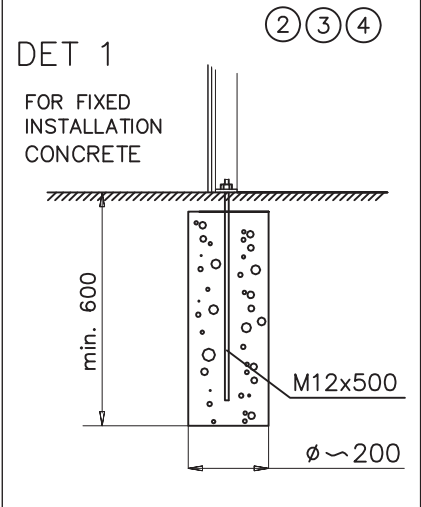


① RF3210M	PCS ST	② N00129	PCS ST
	1		4
		M12x500	
③ 902234	PCS ST	④ 980165	PCS ST
	4		4
M12		24x13x2,5	

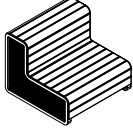


**CHILLA**

FOR INSTALLATION OF  
CHILLOUT STAND WITH  
USB SOCKET: CONNECT THE  
PLUG TO PREINSTALLED  
SCHUCKOSOCKET

FÖR INSTALLATION AV  
CHILLA GRADÄNGEN MED  
USB UTTAG: KOPPLA IN  
STICKKONTAKT I FRAM-  
DRAGET SCHUCKOUTTAG

USB-LIITÄNTÄ ASENNUS  
CHILLA SOHVA: KYTKEÄ  
PISTOKE ESIASENNETTU  
SCHUCKO PISTORASIA

USB socket  
USB uttag  
USB-liitäntä

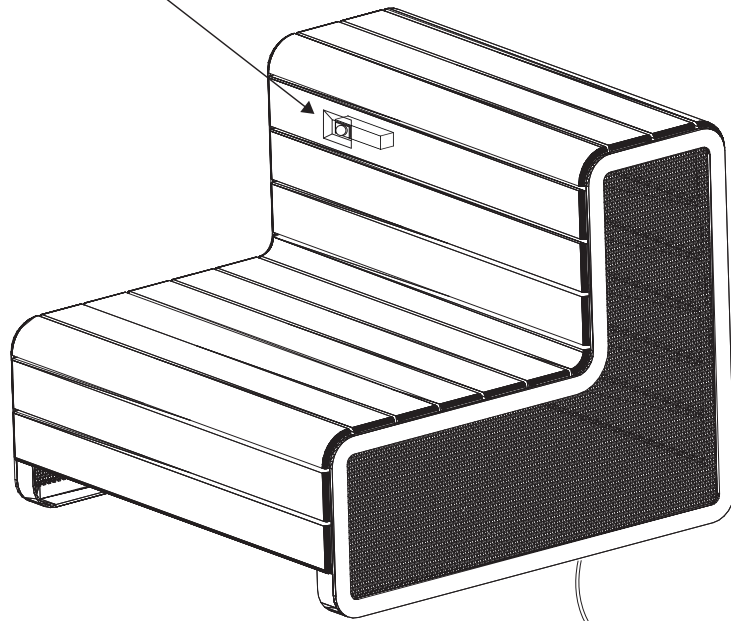

DET 3

Plug  
Stickkontakt  
Pistoke

**IMPORTANT!**

All electric installations must be  
executed by a certified electrician


**VIKTIGT!**

All framdragning av elektricitet  
måste utföras av certifierad elektriker

**TÄRKEÄÄ!**

Kaikki sähköasennukset on suoritettava  
sähköasentajan toimesta

 DET 3



230V~50 Hz