





Product Name	Minisphere
Product Code	IP18
Document Release Date	06/09/2021
Document Rev	1
Total Install Hours	2 Hours
Concerete Required	0.11m³

Installation Sheet for IP18 - Minisphere

INSTALLATION OVERVIEW





Two people are required for this installation.

Day One - 2 Hours

Check that all bolts and fixing are secure befoure installation.

Excavate to 500mm x 500mm x 450mm. See page 3. This is for the ground anchor support and cement.

Place a slab or similar hard standing base into the bottom of the excavated hole. Ensure this is level.

Position ground anchors in place. See page 4. Ensure the ground anchor is level.

Pour cement into the excavated hole, making sure that the inground support structure is fully immersed.

A total of 0.11m³ is required of cement.


When cement is set, Ensure there are no sharp corners of the cement exposed. Ensure unit functions without breaking away from the installed foundations.

CHECK PRODUCT IS LEVEL AND SECURE.









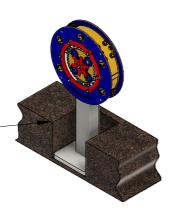




Within the allocated space excavate 500mm x 500mm x 450mm.

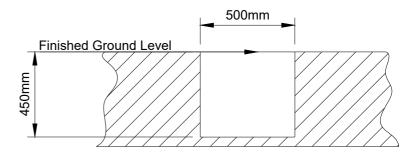

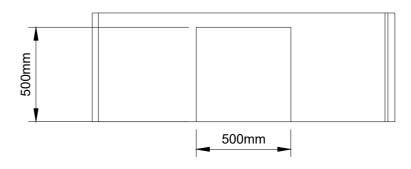


Place a slab or similar hard standing base into the bottom of the excavated hole. Ensure this is level

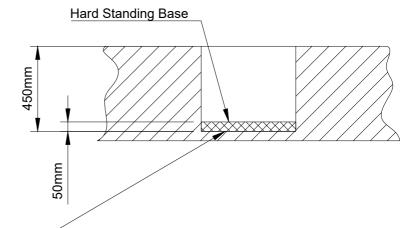





Hard Standing Base.

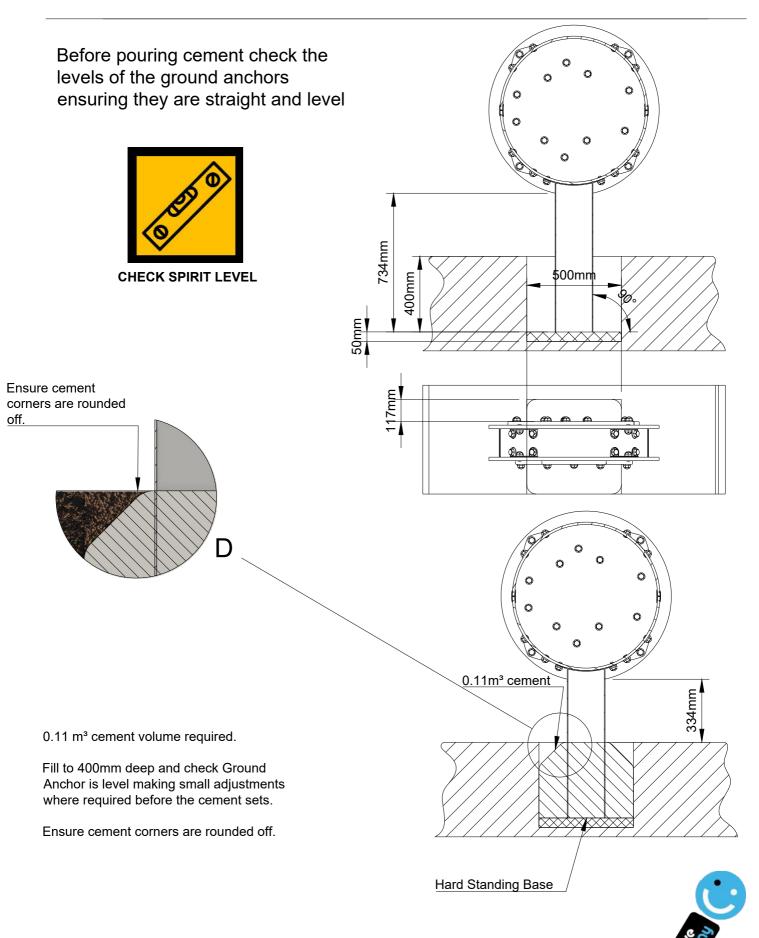


Installation Sheet for IP18 - Minisphere

Only when the cement is set and using the fixings provided, Ensure all fixings are tight and secure before making good the surface by packing down any gaps with the surface material.




Check to ensure the installed unit is level.

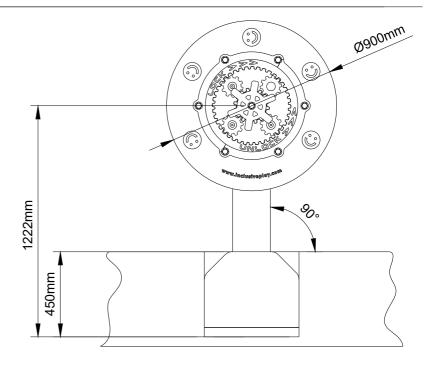



SAFETY SURFACING DETAILS

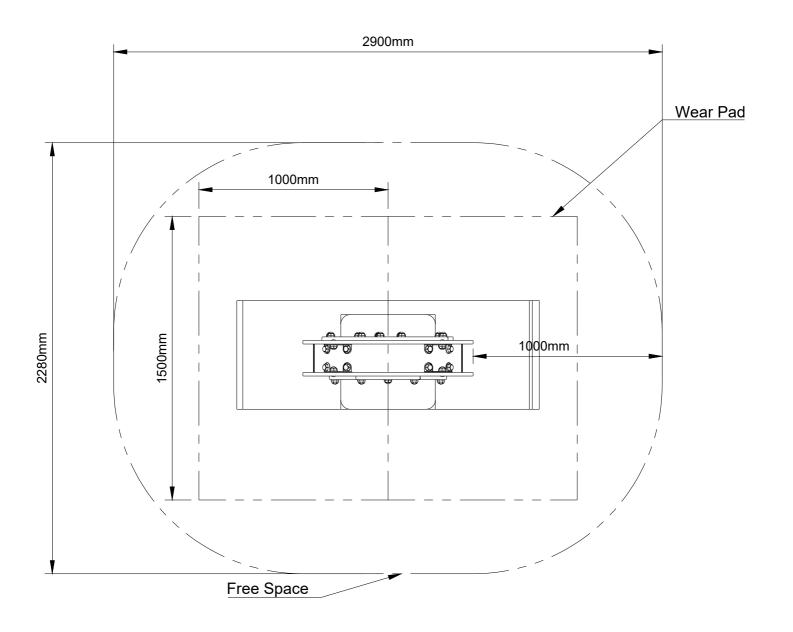

Product	IP8018
Free Fall Height	N/A
Wtpour QTY (m²)	None Required
Grassmat QTY (mat - 1.5m²)	2 mats for wear pad
Loosefill (m³)	None Required

