




# Installation Instructions



Weight of heaviest part **9.6kg** (Wooden Posts Each)

Ground Fixed  
Freechimes  
Alto/ Soprano  
Page 1 of 3



- Components:
-  Eye Straps X2
  -  10x38mm Secure Screw X4
  -  6x80/50 Screw X4

**1. Carefully lay 2 x legs** on a **level surface** and check distance between **legs is equal**. Line up pre drilled holes in the backboards with the legs and ensure the instrument is aligned square with the legs. **Fix** in place using **6x80mm screws** supplied (see installation guide)


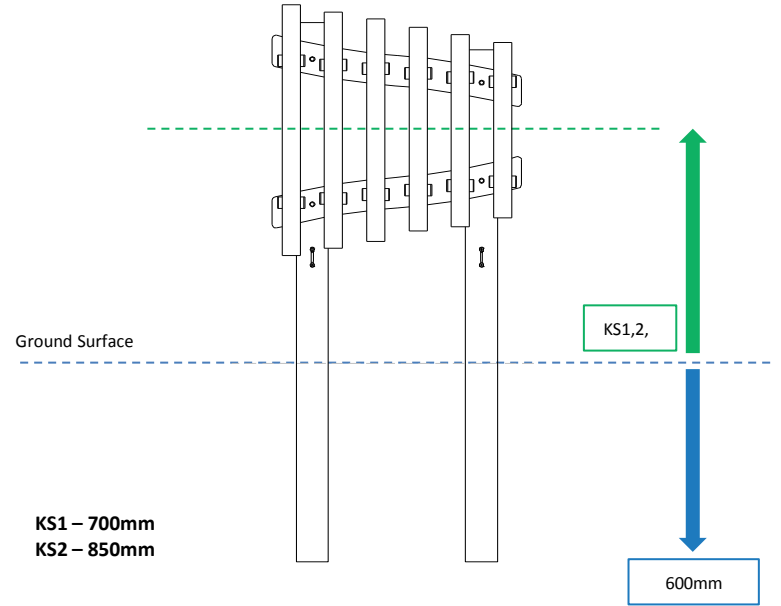
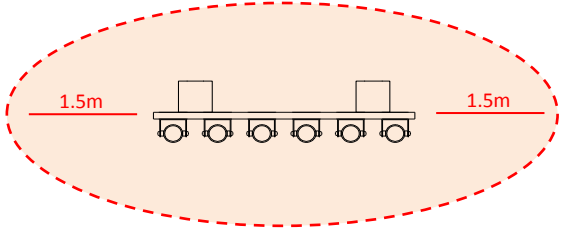
**2. Excavate 2 holes** on site of installation approximately **600mm deep** ( adjust depth according to age range for intended players)

**3. Carefully raise the instrument** from the ground **with legs attached** and locate (lower) legs **into holes** making sure they are vertical and level prior to concreting in place. (See Ground Fix Sheet)



**4. Once happy with location and levels, fill holes** using rapid hardening **concrete**. Be sure to compact concrete around legs and leave to dry according to manufactures guidelines

**5. Beaters can be fixed** to wooded posts with fixings provided

Install Instrument with 1.5m free space (from widest point) around it.

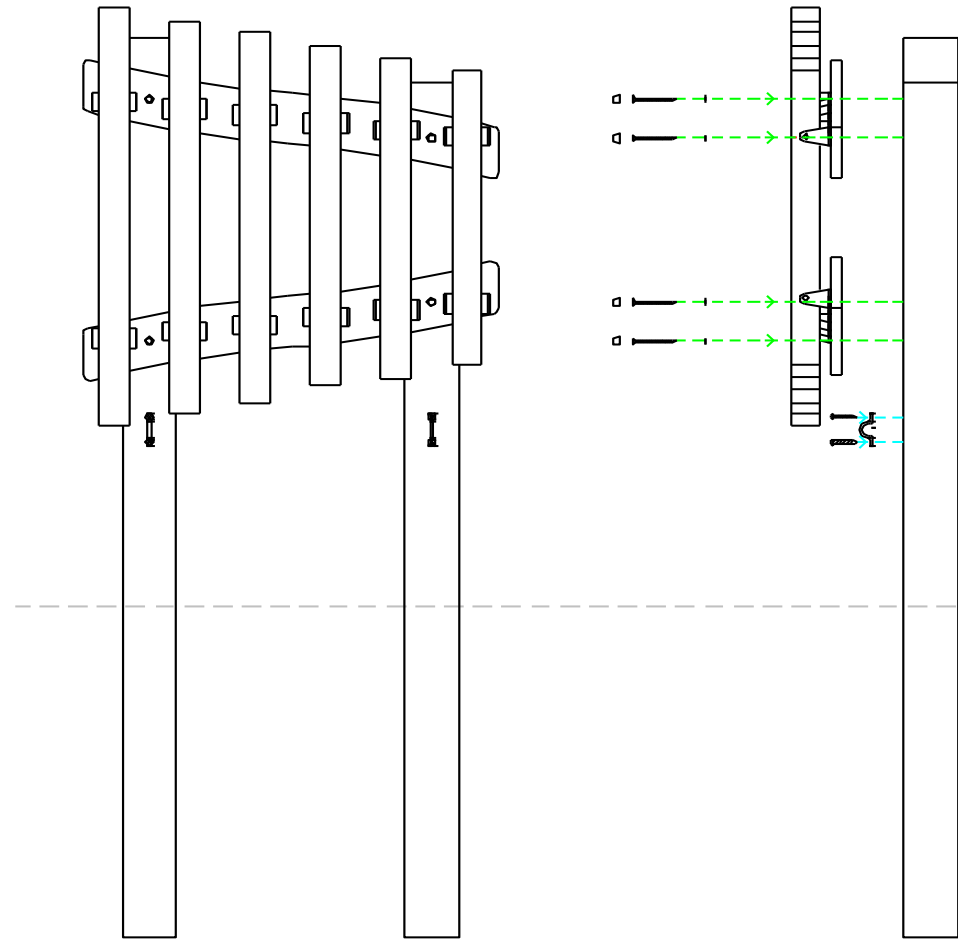


**Tools:**






 x1       x1

TX 25 Driver Bit      TX 30 Driver Bit

**Ground Fixed**  
Freechimes  
Alto/ Soprano  
Page 2 of 3




**COMPONENTS LIST:**

-  Black Plastic Screw Cap X4
-  White Plastic washer X4
-  8x70 screw X4
-  Saddle Strap X2
-  10x38 Pin TX Screw X4

**Instrument Components:**

-  Eye Straps X2
-  10x38mm Secure Screw X4
-  6x80/50 Screw X4

 Pair Small Beaters X1

Spares available from  
[percussionplay.co.uk](http://percussionplay.co.uk) or from your  
local distributor

**28-32 Kg**

# Ground Fix Installation

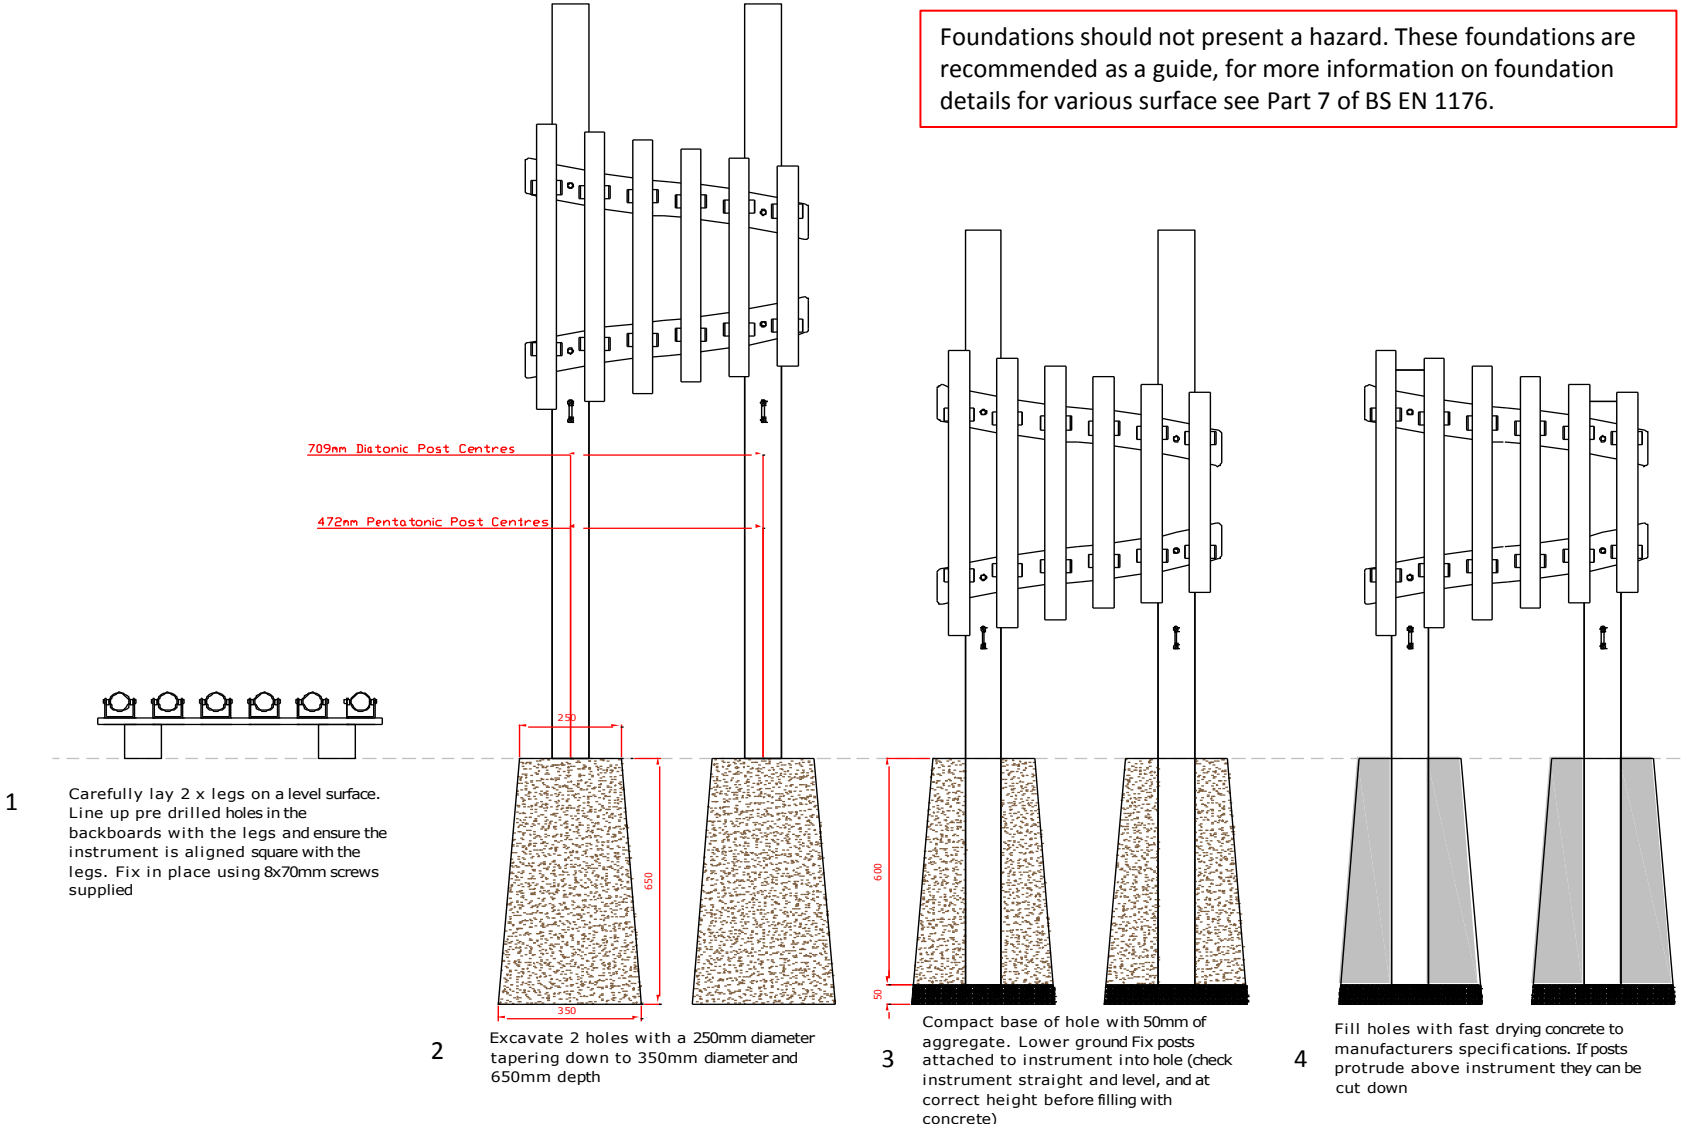
Foundations should not present a hazard. These foundations are recommended as a guide, for more information on foundation details for various surface see Part 7 of BS EN 1176.

## Ground Fixed

Freechimes  
Alto/ Soprano  
Page 3 of 3



Components:  
2 Treated Posts  
90x90x2000



Options for finishing wooden posts:  
A - Dig the posts in deeper than recommended minimum depth to avoid cutting off excess post protruding above chimes.  
B - Dig post into recommended depth, set height of chimes and cut excess post protruding above chimes, but exposed end grain will need treating.