


LAPPSET®

FLORA

ASENNUSOHJE
MONTERINGSANSVISNING
INSTALLATION INSTRUCTION
AUFBAUANLEITUNG
NOTICE D'INSTALLATION

DATE: 22.5.2024


QFL0008

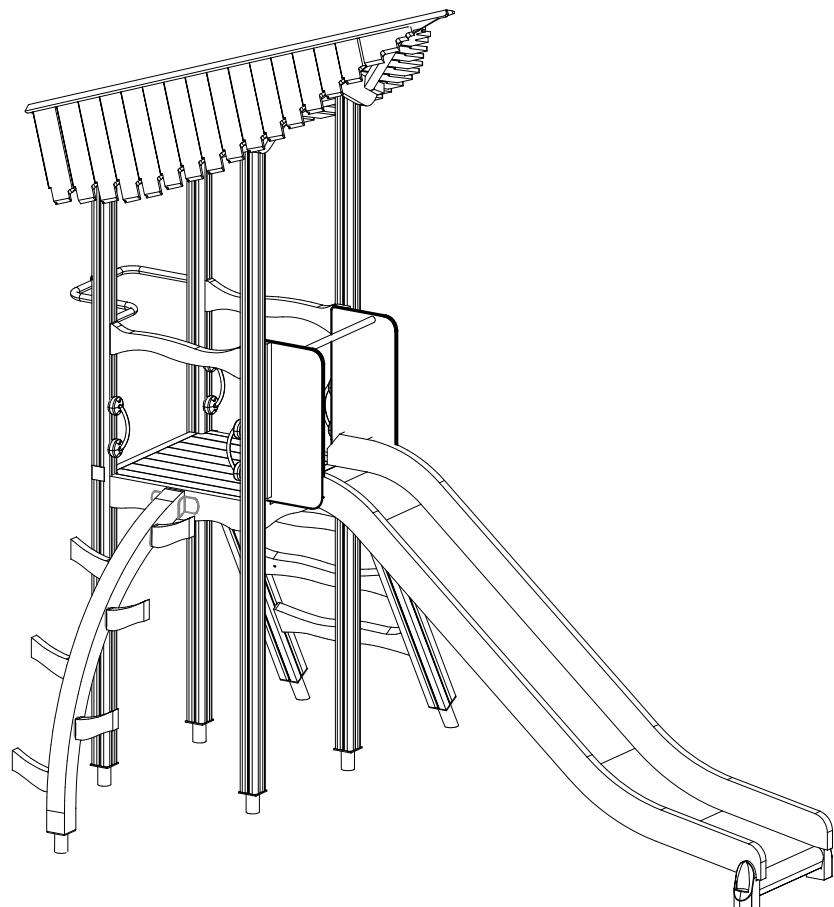



DATE: 22.5.2024



1(1)
3

702286 65x65	PCS 1	705203-001 	PCS 1	705211-001 	PCS 4	705214-001 	PCS 2	705227-001 	PCS 1	705236-001 	PCS 2
705238-001 93x93x2846	PCS 2	705258-001 	PCS 1	705308-001 	PCS 1	705368-001 	PCS 1	705511 	PCS 4	711467 	PCS 1
903093 Ø8x90	PCS 20	905104 	PCS 28	909521 	PCS 7	980114 	PCS 4				
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS

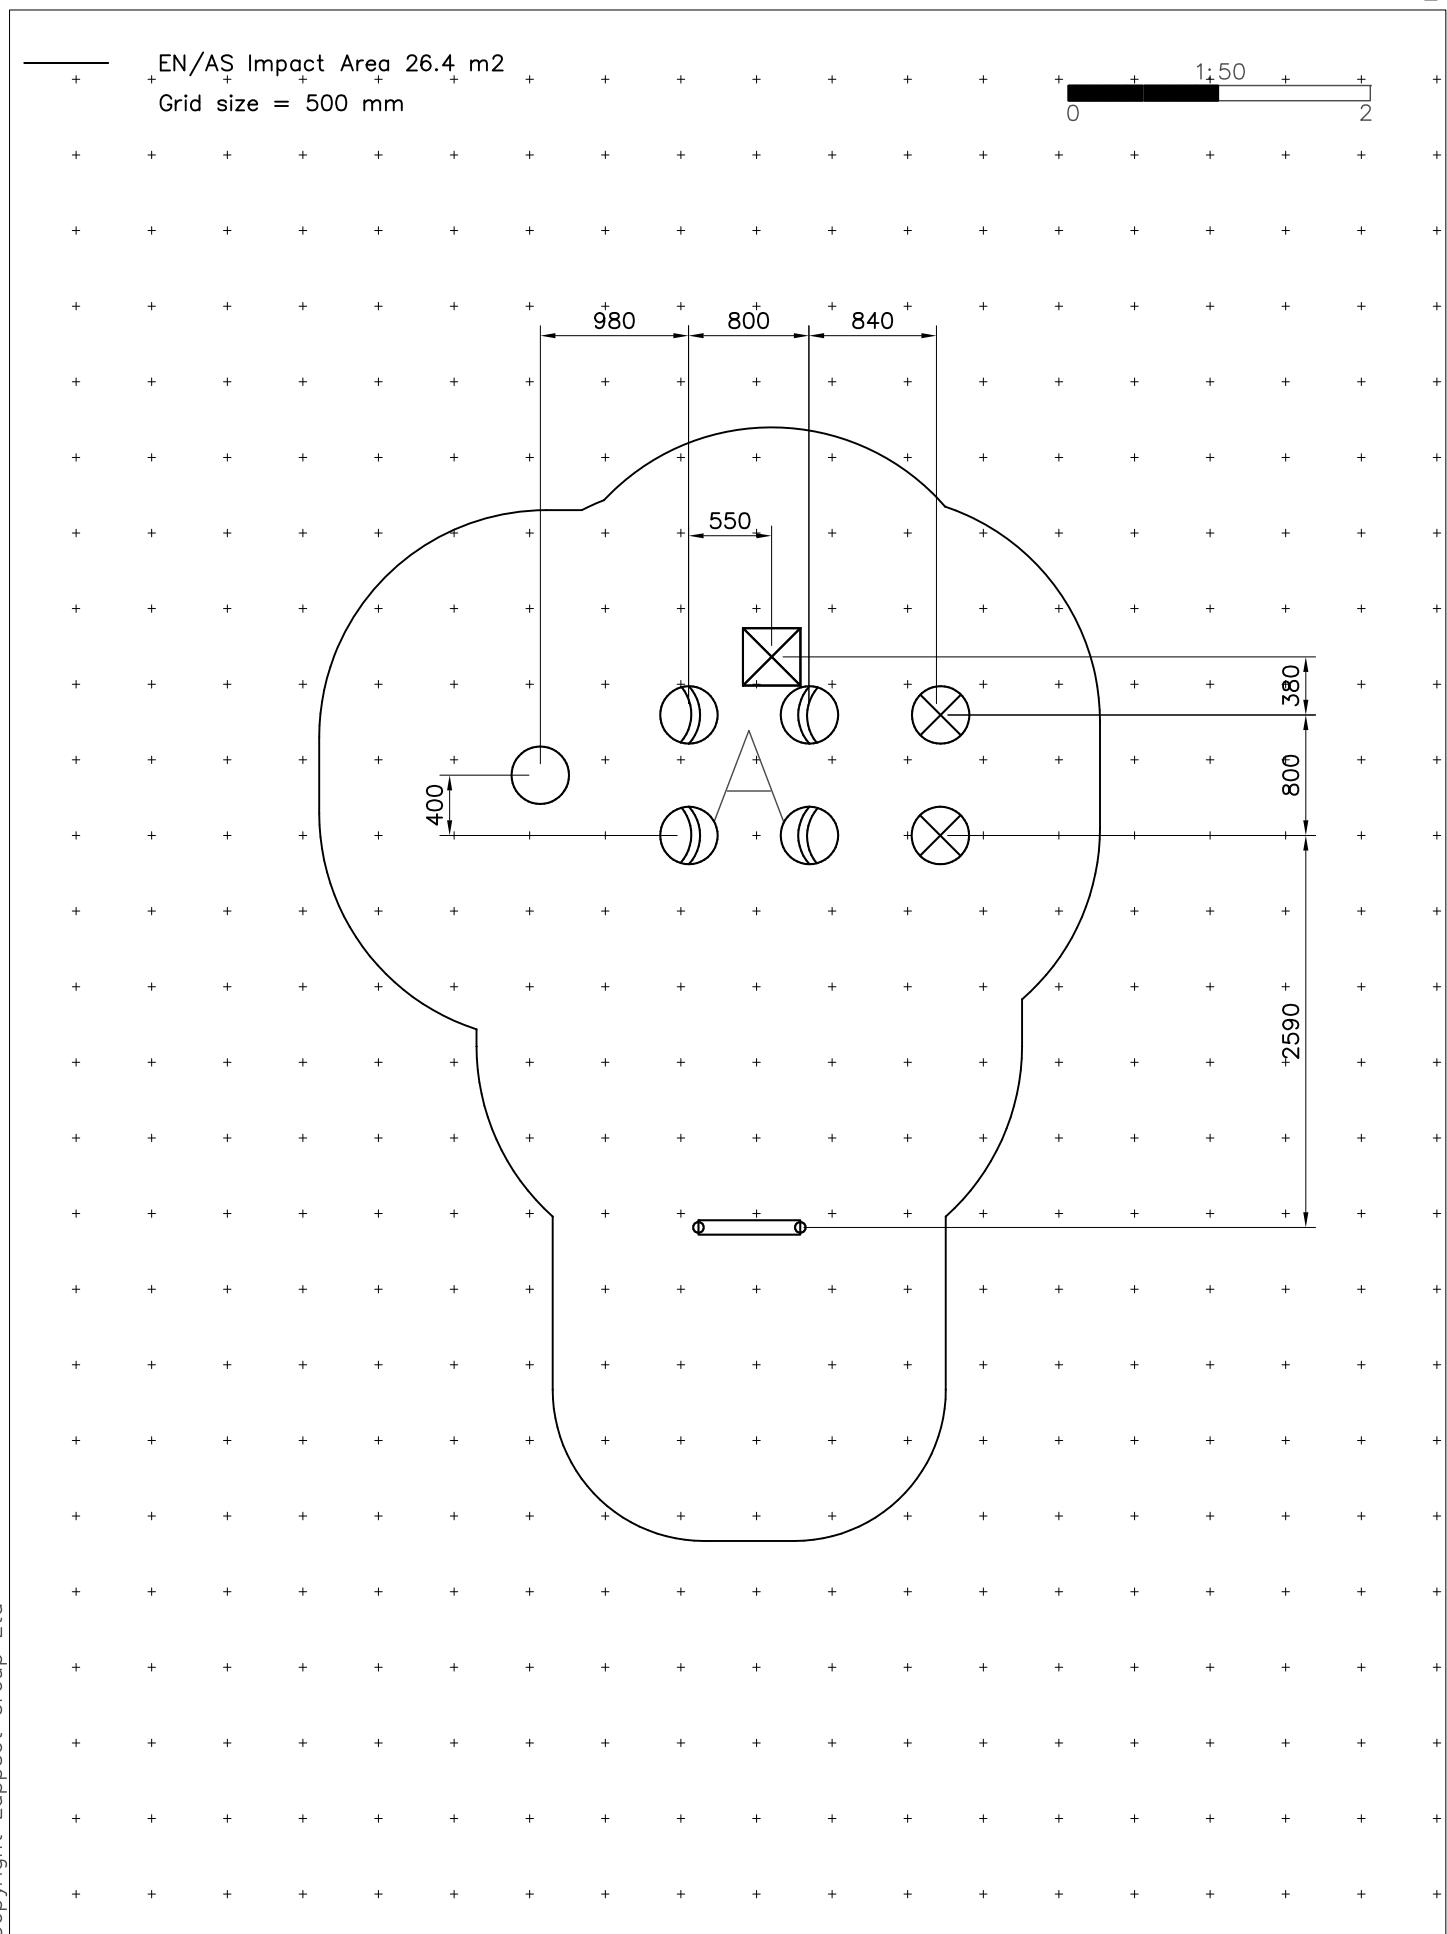

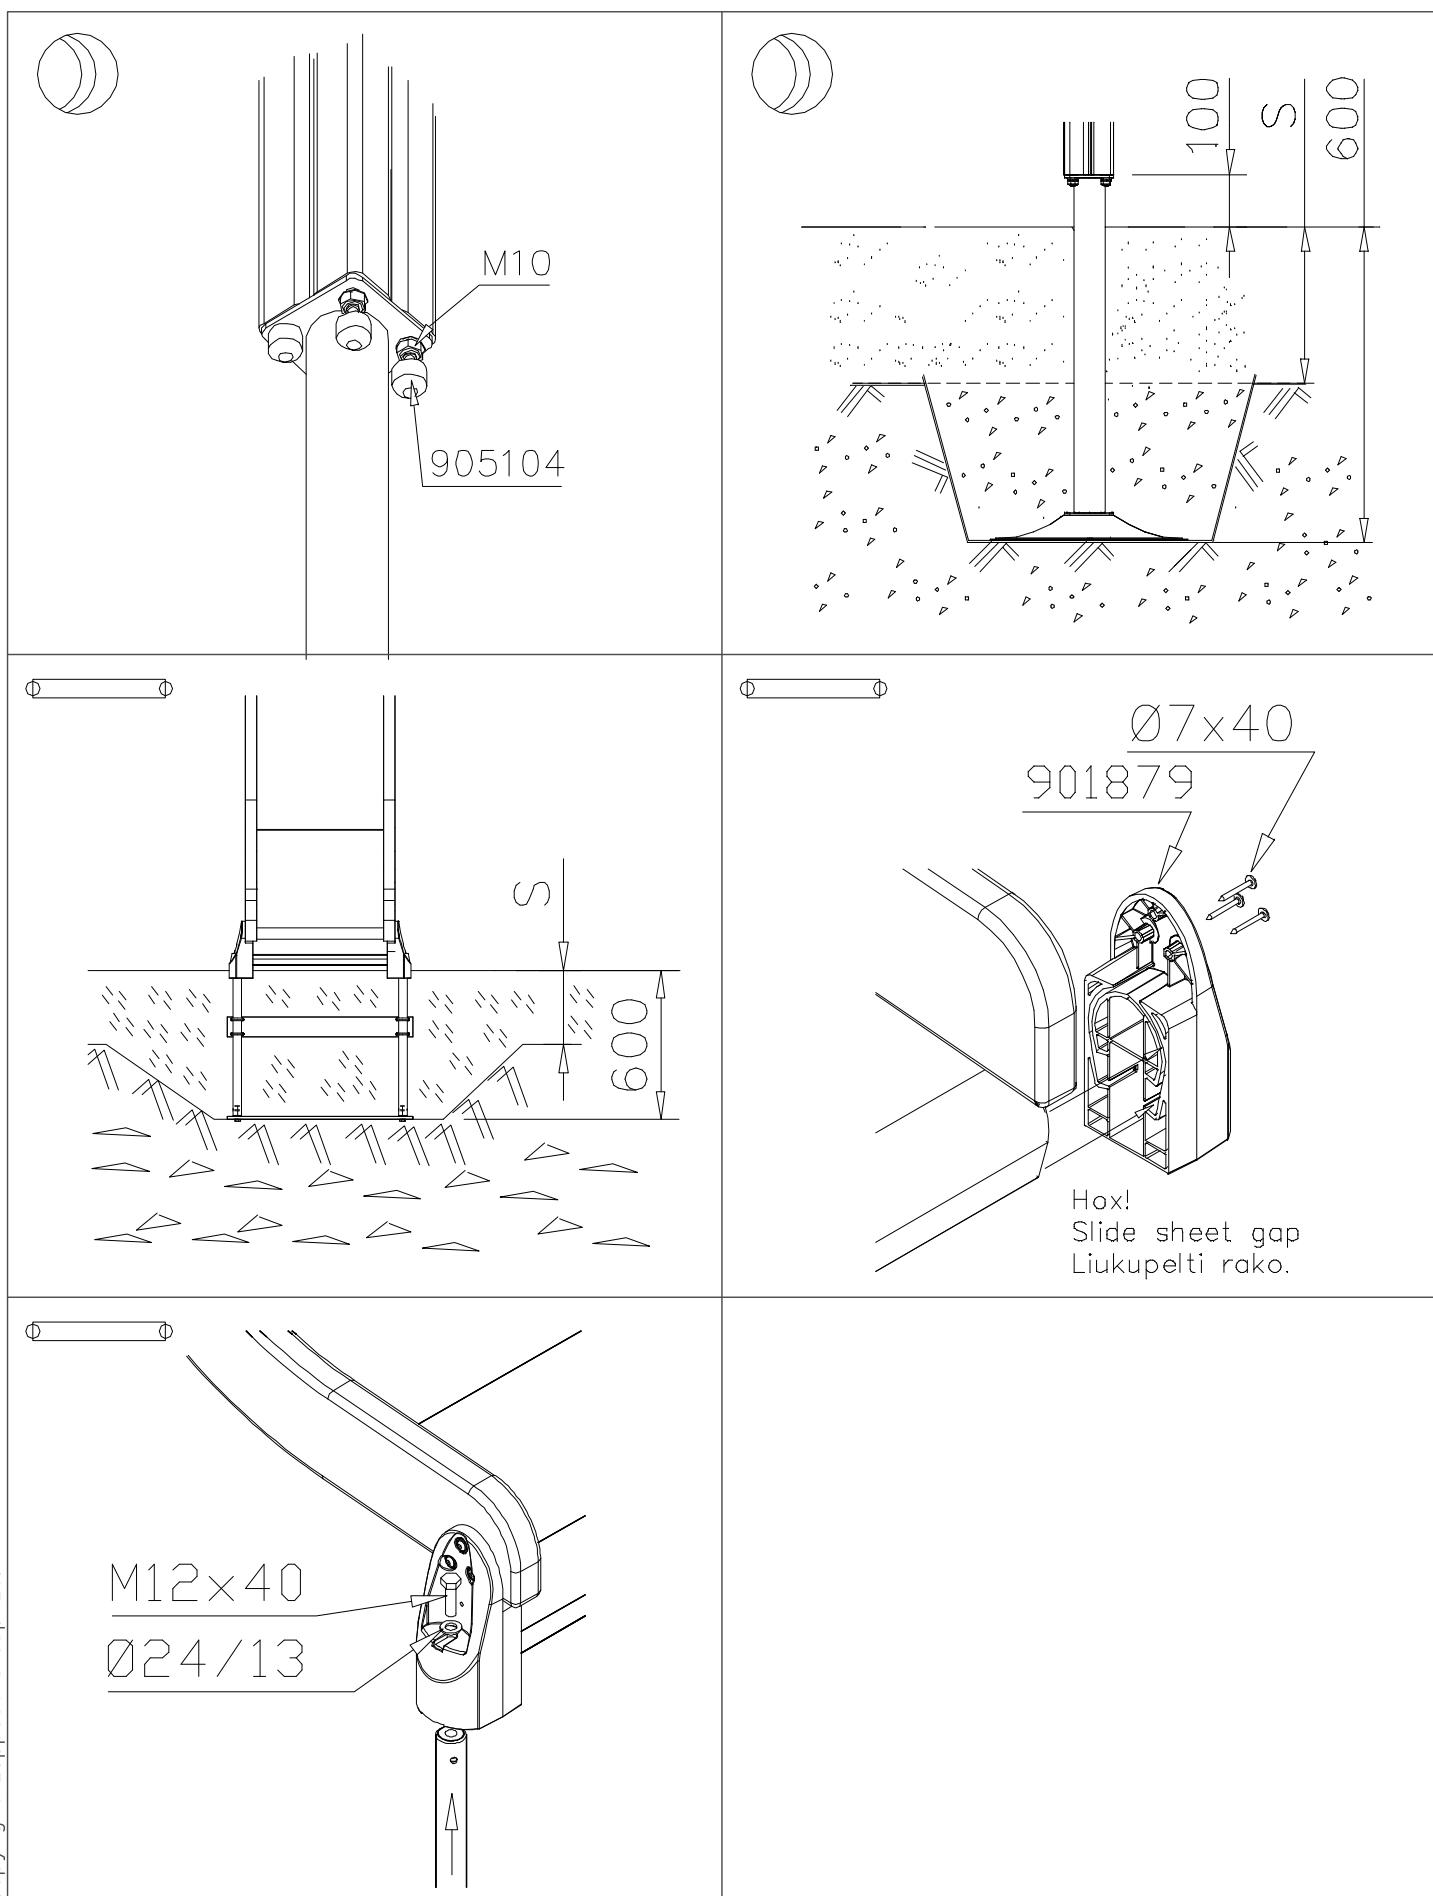

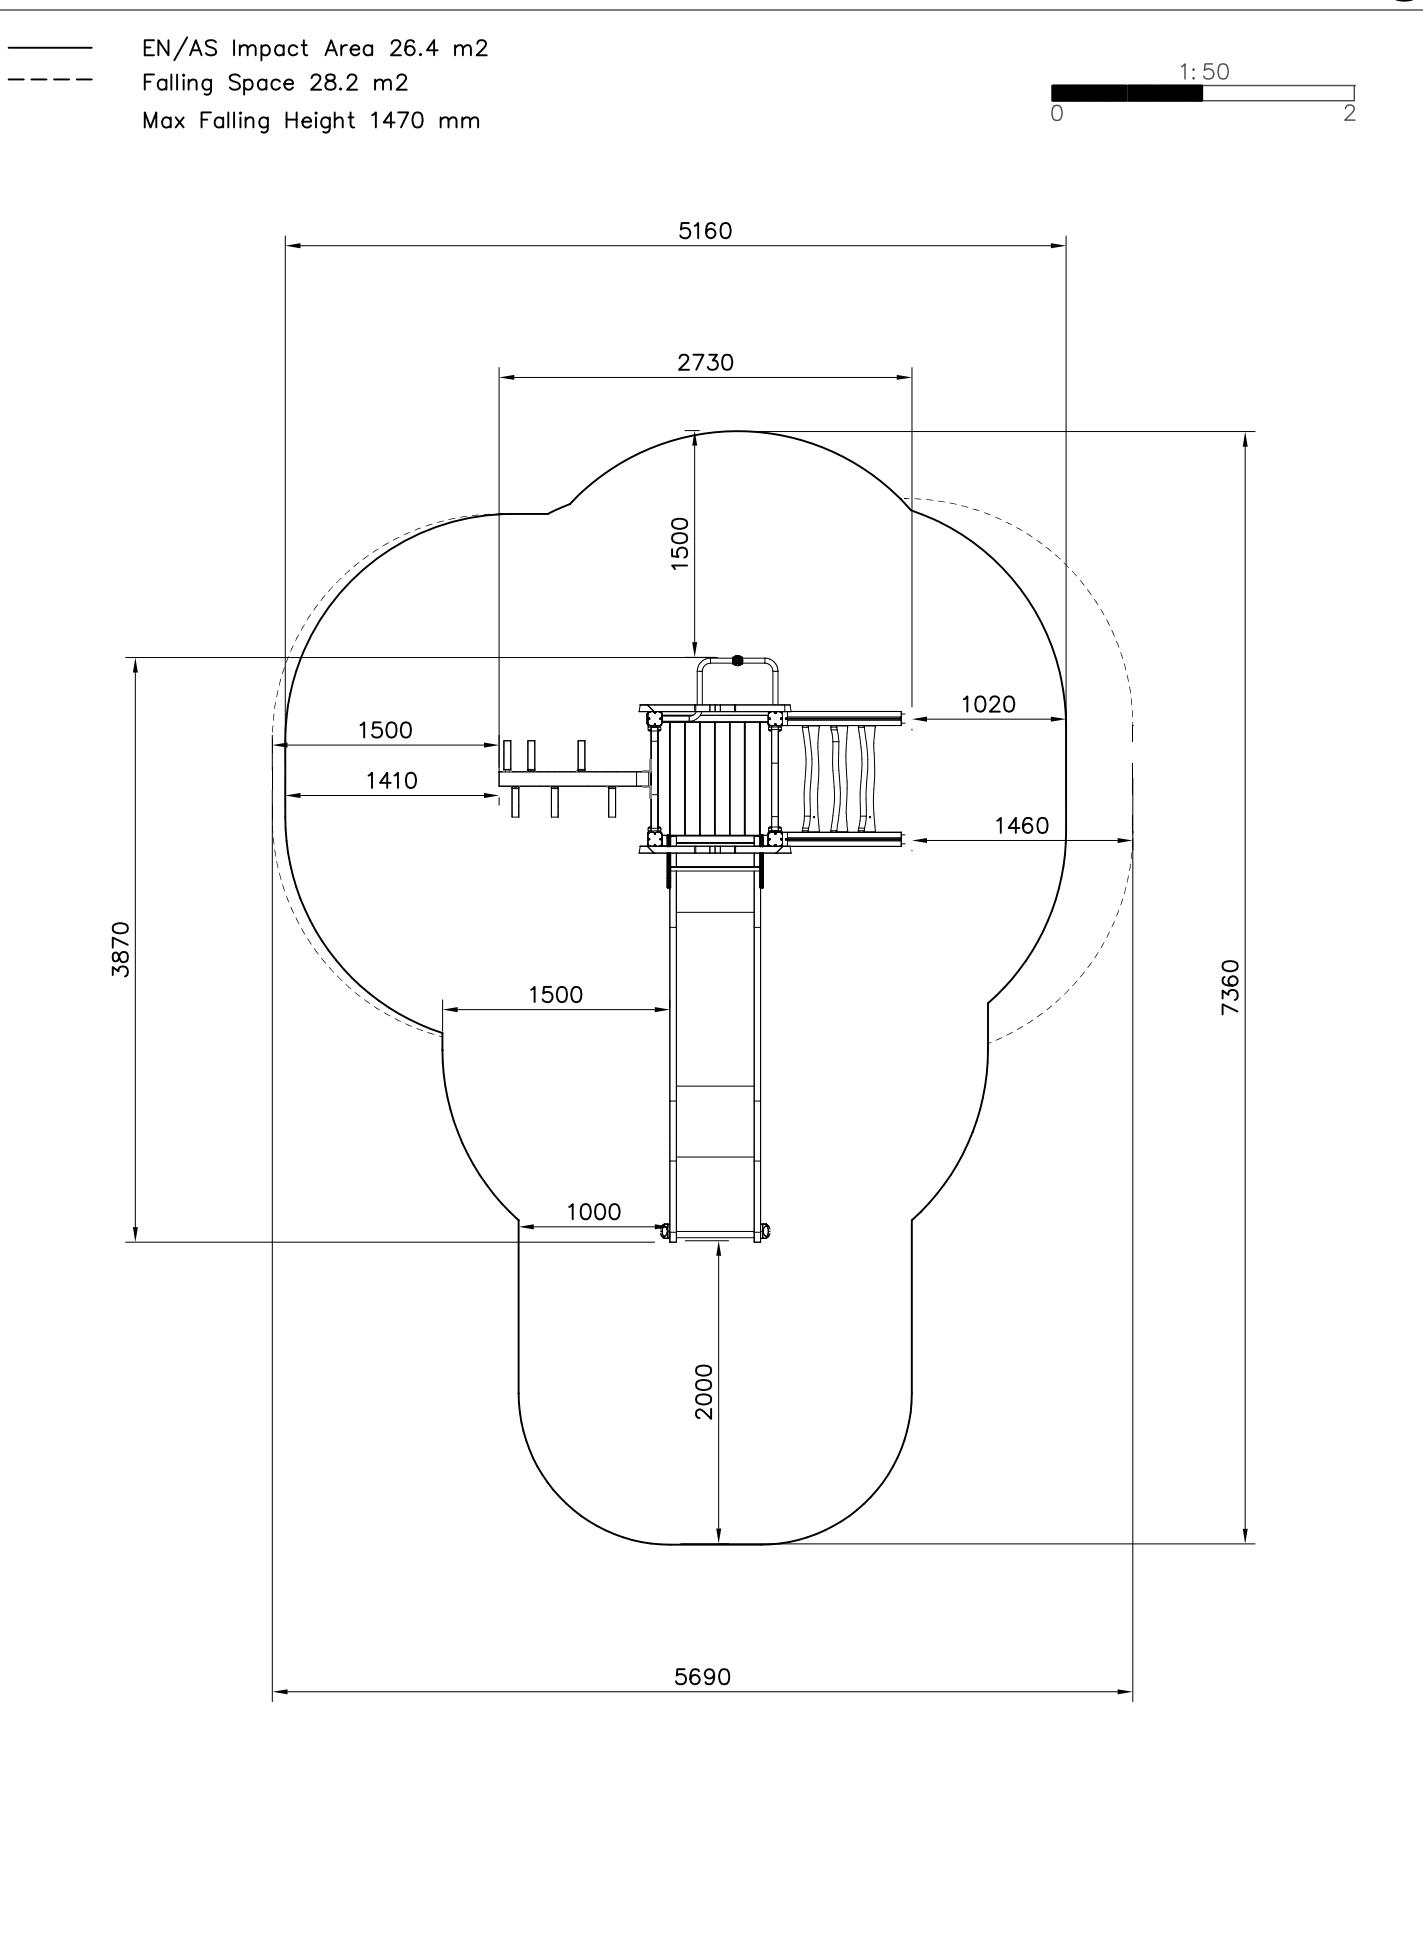


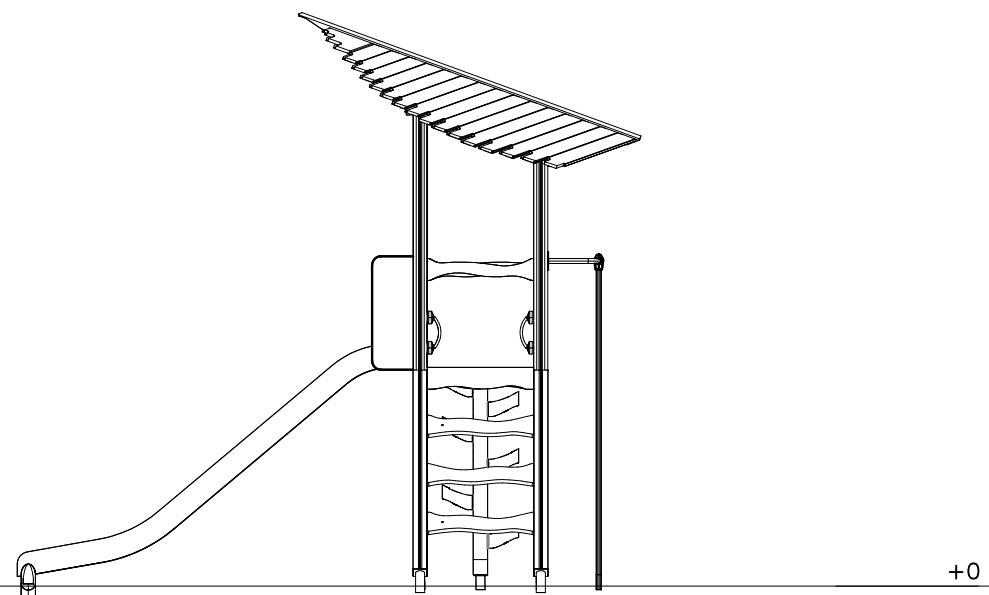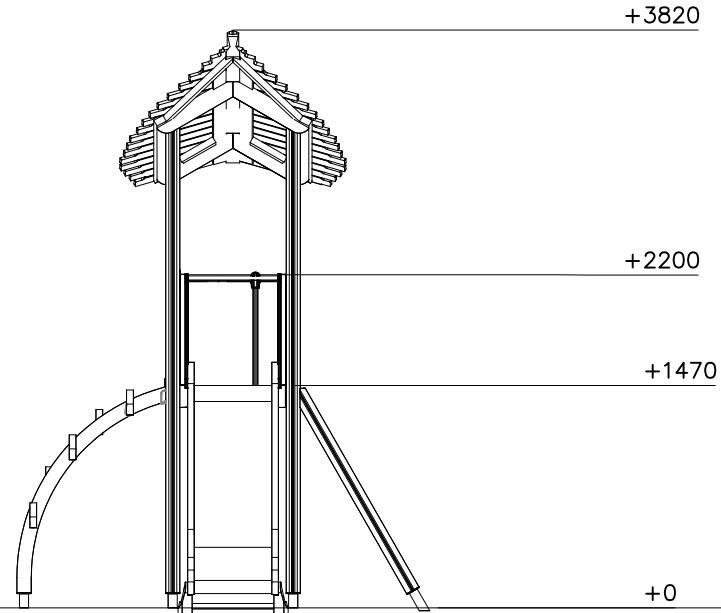

DATE: 22.5.2024


6

705368

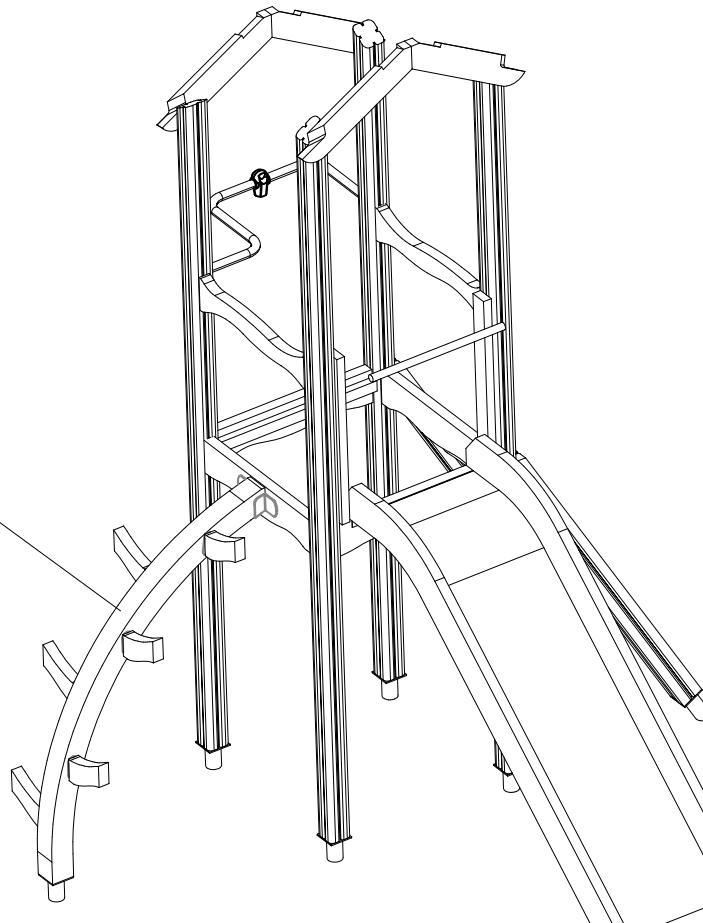


DET 1



705227

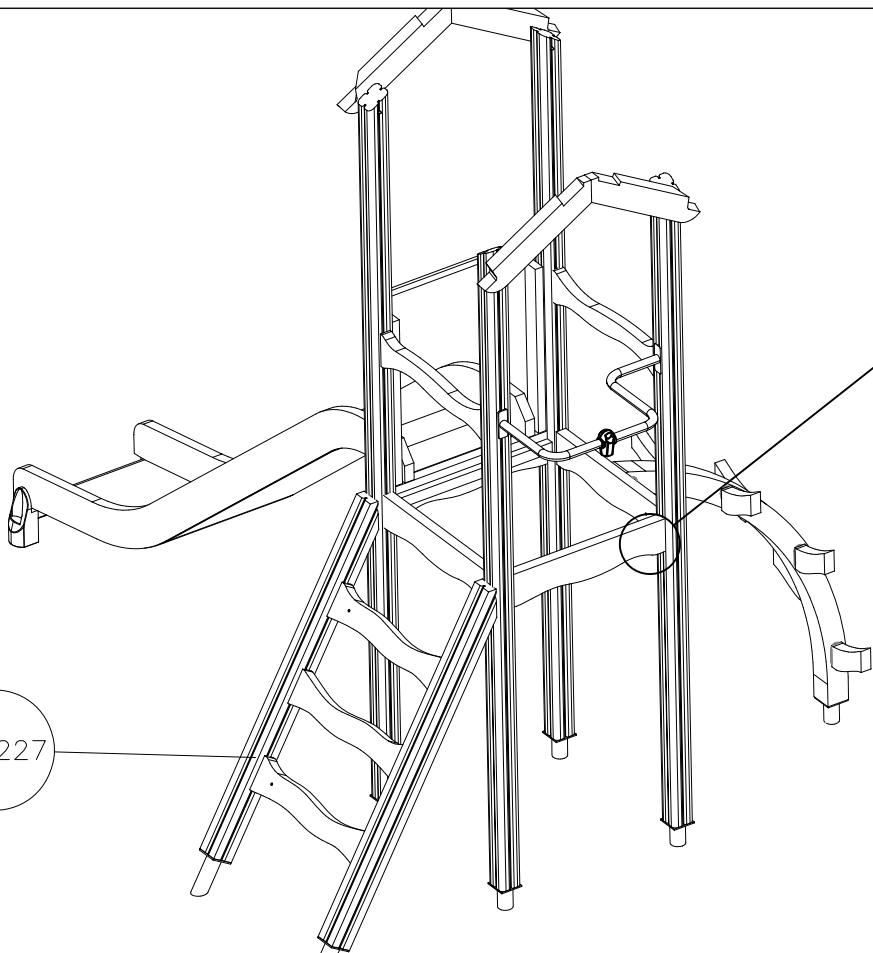

DET 1

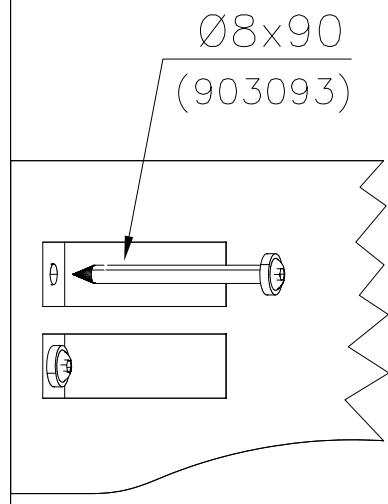


DATE: 22.5.2024

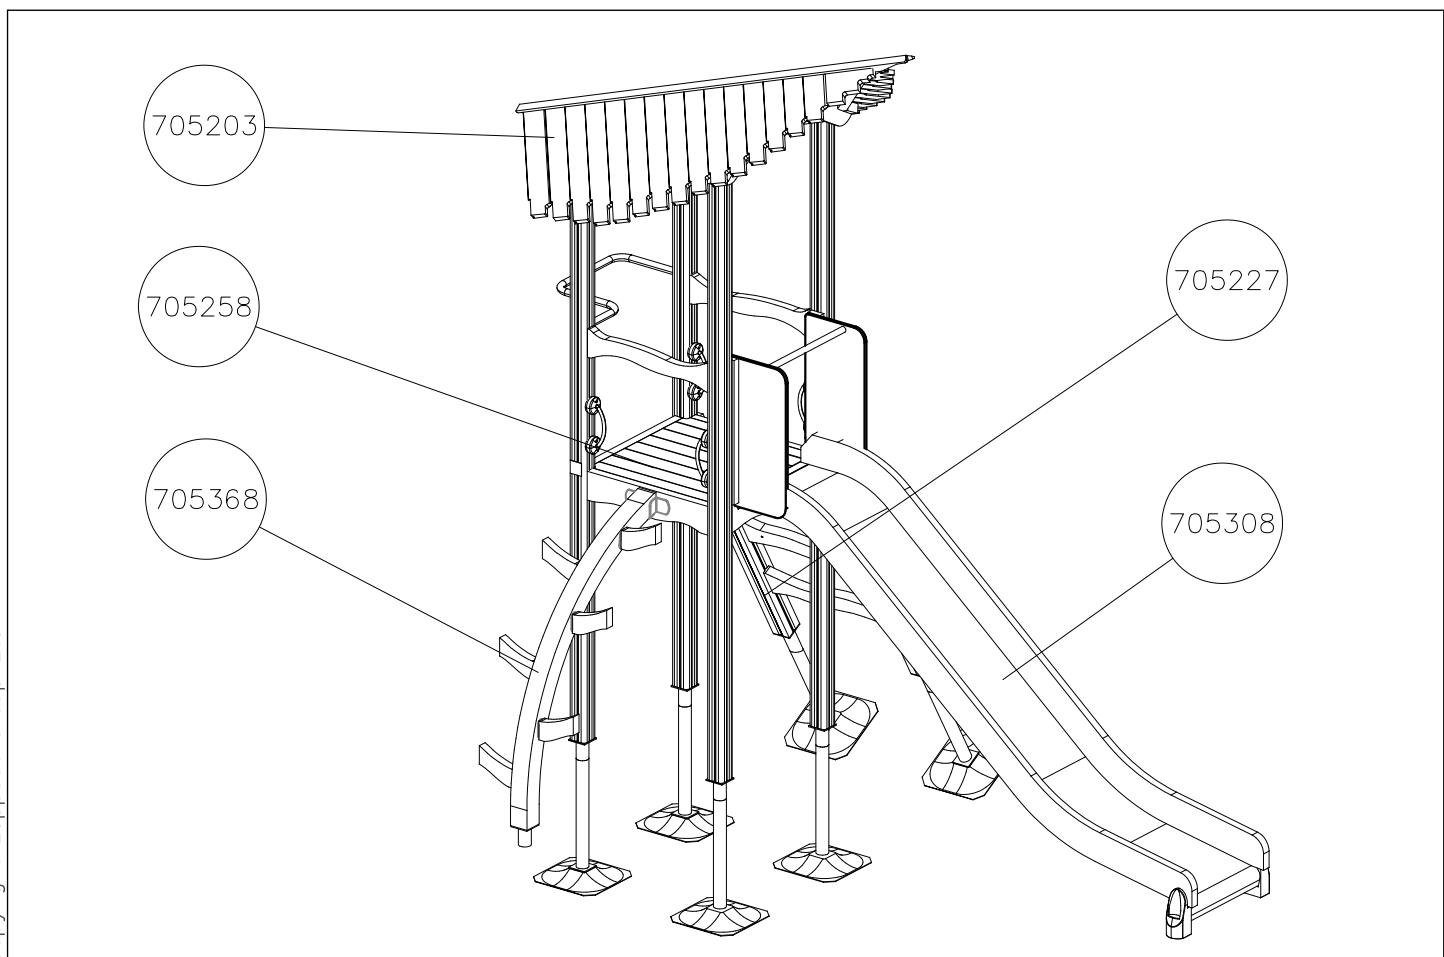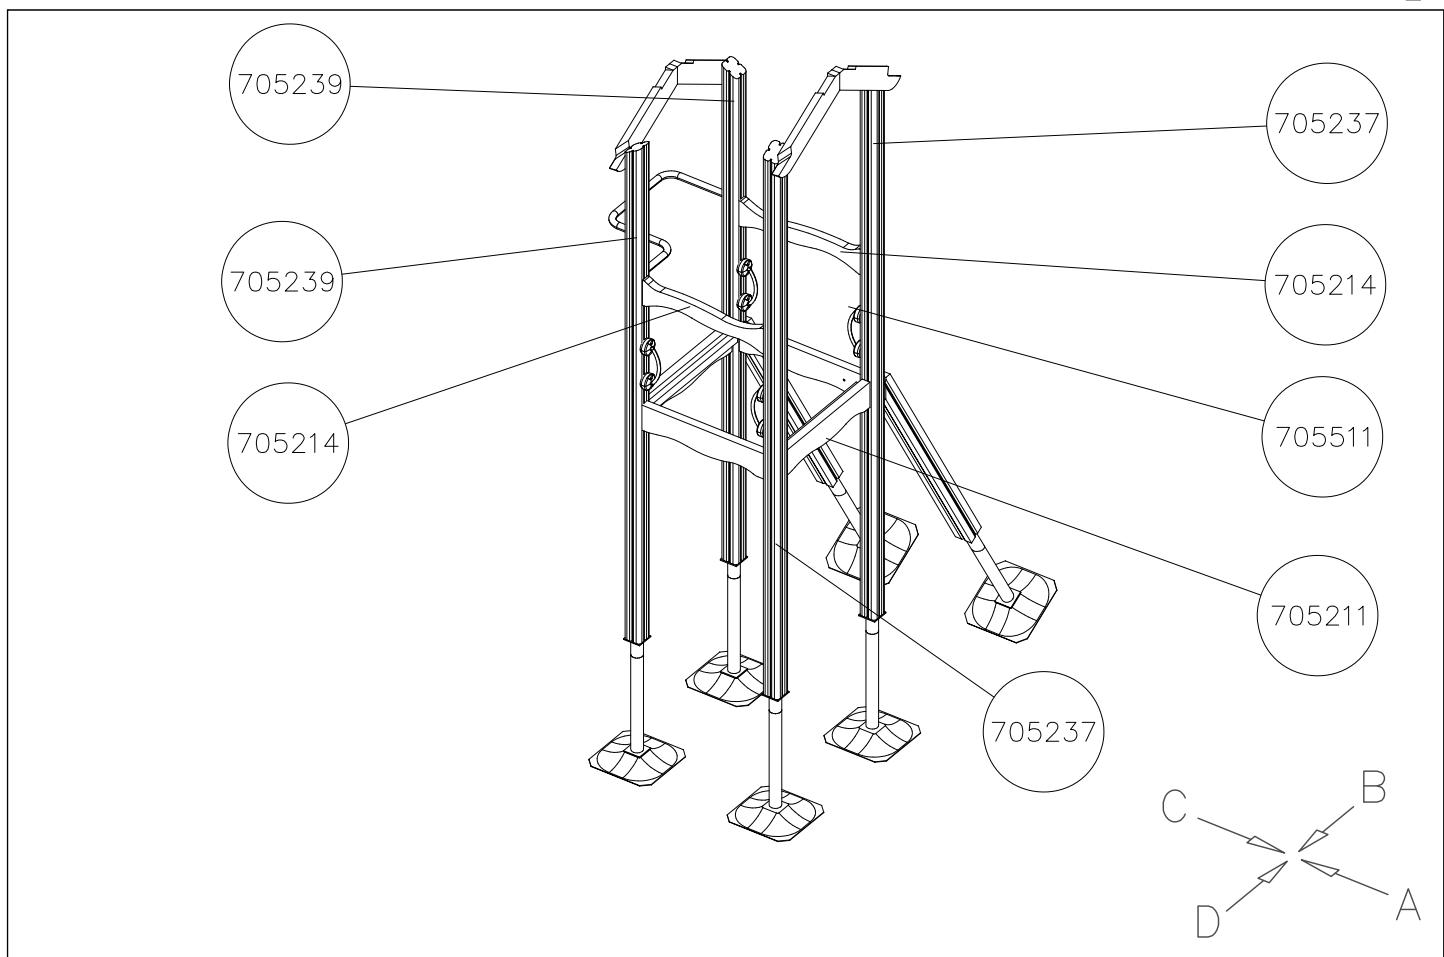


DATE: 22.5.2024

1:50


(A)

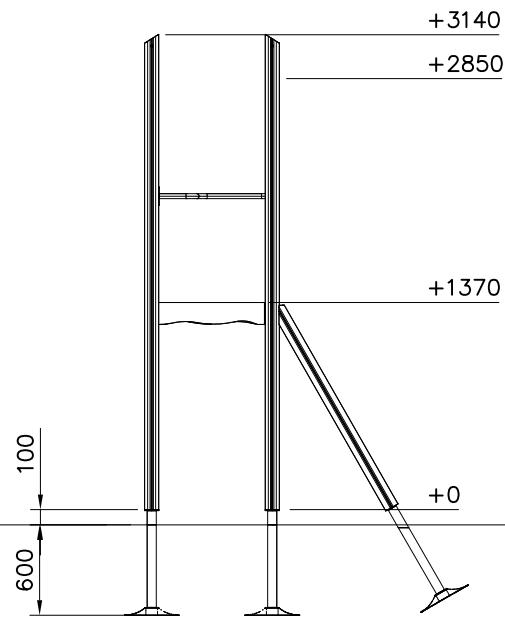

(B)

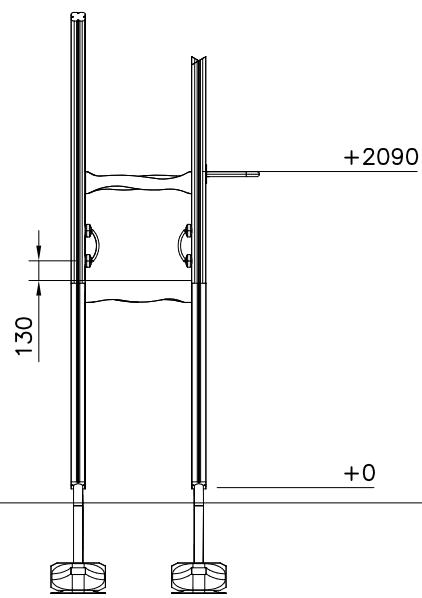

(C)

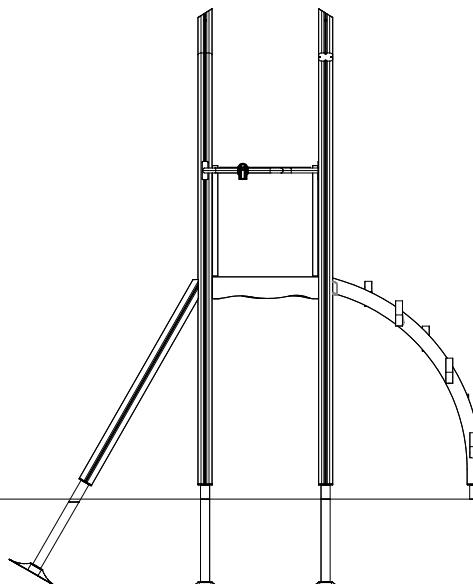

(D)

